

ADDENDUM to H-58-11-AMAM-05  
MR HUB SHEAR BEARING SLEEVE SPACER

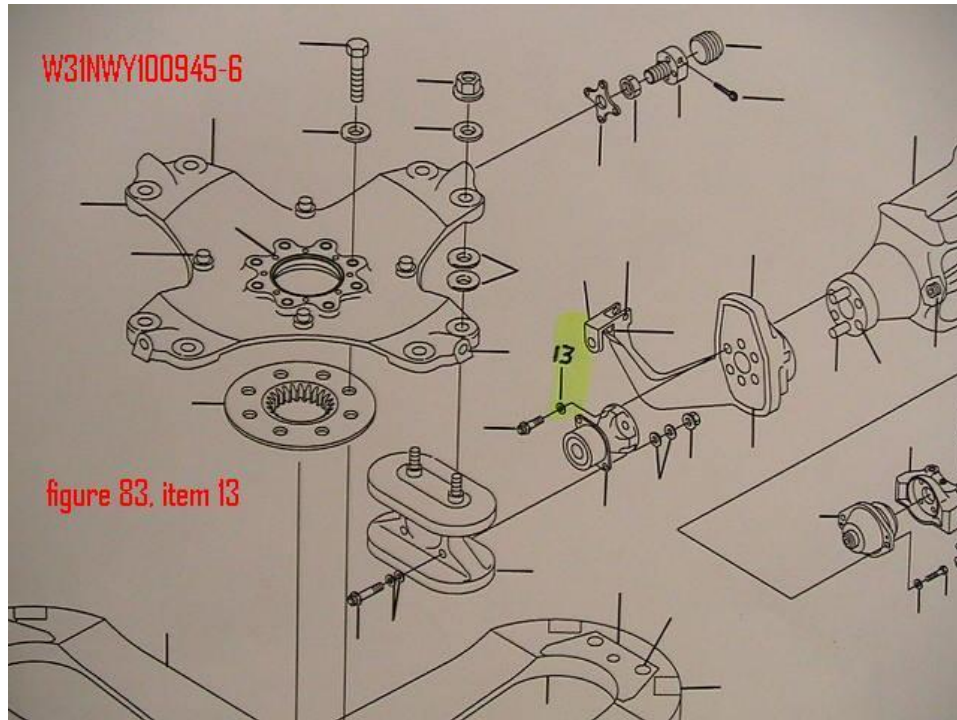


Figure 1: MR Hub Shear Bearing Spacer Sleeve Installation



Figure 2: Example Non-Conforming corroded Spacer Sleeve in package.

ADDENDUM to H-58-11-AMAM-05  
MR HUB SHEAR BEARING SLEEVE SPACER



Figure 3: Example Non-Conforming corroded Spacer Sleeve in package.



Figure 4: Example Conforming Spacer Sleeve.