


UH-1, AH-1, OH-58 ...



WEAR YOUR SHOES

You can watch 10 grand sprout wings and fly away every time you replace skid tubes.

Skid tubes live a rough, short life, especially in rocky areas. A few dents put them beyond tolerance and onto the scrap heap.

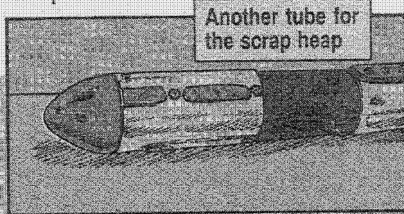

Problem is, the shoes listed in your parts manual won't hold up. They're too flimsy. So, to save a ton of money and aggravation, use heavy-duty, full-length shoes. Order them for your OH-58s with NSN 1630-01-301-0945. That NSN brings a right and left shoe.

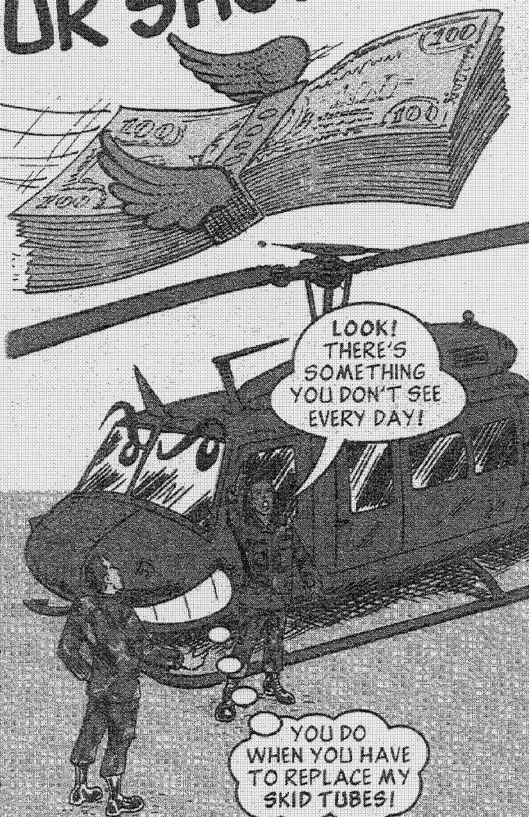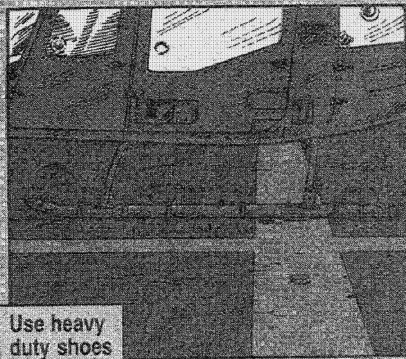

For a pair for your Huey, use NSN 1630-01-375-1503. You can also get the Huey shoes separately. Order a left with NSN 1630-01-374-4111 and a right with NSN 1630-01-374-4110. The FEDLOG nomenclature for the shoes says tube, but these NSNs will bring the shoes.

There's no NSN for Cobra shoes yet, but you can order them from S9C on DD Form 1348-6 using CAGE 8V160 and PN 209-249-0949. For just a left shoe add a LH after the part number; for just a right, add RH.