


## Hot Fix

GLUE THAT  
NEW RUBBER  
SEAL THIS  
WAY!

If you're flying your OH-58 with its doors off, chances are the seals around the door frames are taking a beating and need to be replaced.

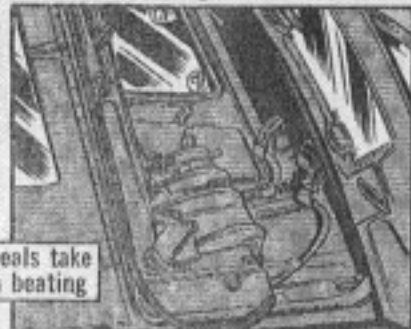

Seals take a beating

The usual solution is to remove the damaged seals and install new ones. This time, tho, glue the seals to the cargo and crew doors and not to the door frames on the fuselage, like so:



Glue new seal to the door

- Remove the damaged seal from the fuselage with toluene, NSN 6810-00-281-2002. Use plastic gloves when handling toluene.
- Use a clean rag and methyl-ethyl-ketone (MEK), NSN 6810-00-281-2785, to clean the edge of the door.
- Sand the edge of the door with 180 grit sandpaper, NSN 5350-00-721-8117.
- Wipe the sanded area clean with a rag and MEK.
- Glue the rubber seal, NSN 9390-00-133-6472, to the door with adhesive.